

SunLong Biotech Co.,LTD Tel: 0086-571- 56623320 Fax:0086-571- 56623318 E-mail:sales@sunlongbiotech.com www.sunlongbiotech.com

# **Quick Step Human orexin ELISA Kit**

Size: 96 T, 48T

Catalogue Number:QS2101Hu

Assay Time: 60 minutes

Store all reagents at 2-8°C/-20°C

Validity Period: 2-8°C for six months, -20°C for one year. Avoid repeated thaw cycles.

For samples: In serum, plasma, culture media or any biological fluid.

FOR RESEARCH USE ONLY !

## NOT FOR THERAPEUTIC OR DIAGNOSTIC APPLICATIONS !

PLEASE READ THROUGH ENTIRE PROCEDURE BEFORE BEGINNING !

# Purpose

Our Quick Step Human orexin ELISA Kit is to assay orexin levels in Human serum, plasma, culture media or any biological fluid.

# Principle

This ELISA kit uses Sandwich-ELISA as the method. The Microelisa stripplate provided in this kit has been pre-coated with an antibody specific to orexin. Standards or samples are added to the appropriate Microelisa stripplate wells and combined to the specific antibody. Then a Horseradish Peroxidase (HRP)- conjugated antibody specific for orexin is added to each Microelisa stripplate well and incubated. Free components are washed away. The TMB substrate solution is added to each well. Only those wells that contain orexin and HRP conjugated orexin antibody will appear blue in color and then turn yellow after the addition of the stop solution. The optical density (OD) is measured spectrophotometrically at a wavelength of 450 nm. The OD value is proportional to the concentration of orexin. You can calculate the concentration of orexin in the samples by comparing the OD of the samples to the standard curve.

	Materials provided with the kit	96 determinations	48 determinations
1	User manual	1	1
2	Closure plate membrane	2	2
3	Sealed bags	1	1
4	Microelisa stripplate	1	1
5	Standard:360.0ng/L	0.5ml×1 bottle	0.5ml×1 bottle
6	Standard diluent	1.5ml×1 bottle	1.5ml×1 bottle
7	HRP-Conjugate reagent	6ml×1 bottle	3ml×1 bottle
8	Sample diluent	6ml×1 bottle	3ml×1 bottle
9	Chromogen Solution A	6ml×1 bottle	3ml×1 bottle
10	Chromogen Solution B	6ml×1 bottle	3ml×1 bottle

Materials provided with the kit

11	Stop Solution	6ml×1 bottle	3ml×1 bottle
12	wash solution	$20ml(30X) \times 1bottle$	$20ml(20X) \times 1bottle$

### **Sample preparation**

#### 1. Serum preparation

After collection of the whole blood, allow the blood to clot by leaving it undisturbed at room temperature. This usually takes 10-20 minutes. Remove the clot by centrifuging at 2,000-3,000 rpm for 20 minutes. If precipitates appear during reservation, the sample should be centrifugated again.

#### 2. Plasma preparation

Collect the whole blood into tubes with anticoagulant (EDTA or citrate). After incubated at room temperature for 10-20 minutes, tubes are centrifugated for 20 min at 2,000-3,000 rpm. Collect the supernatant carefully as plasma samples. If precipitates appear during reservation, the sample should be centrifugated again.

#### 3. Urine samples

Collect urine into aseptic tubes. Collect the supernatant carefully after centrifuging for 20 min at 2,000-3,000 rpm. If precipitates appear during reservation, the sample should be centrifugated again. The preparation procedure of cerebrospinal fluid and pleuroperitoneal fluid is the same as that of urine sample.

#### 4. Cell samples

If you want to detect the secretions of cells, collect culture supernatant into aseptic tubes. Collect the supernatant carefully after centrifuging for 20 min at 2,000-3,000 rpm. If you want to detect intracellular components, dilute the cells to 1X100/ml with PBS (pH 7.2-7.4). The cells were destroyed to release intracellular components by repeated freezing and thawing. Collect the supernatant carefully after centrifuging for 20 min at 2,000-3,000 rpm. If precipitates appear during reservation, the sample should be centrifugated again.

#### 5. Tissue samples

Tissue samples are cut, weighed, frozen in liquid nitrogen and stored at -80 °C for future use. The tissue samples were homogenized after adding PBS (pH 7.4). Samples should be operated at 4 °C. Collect the supernatant carefully after centrifuging for 20 min at 2,000-3,000 rpm. Aliquot the supernatant for ELISA assay and future use.

#### Notes:

1. Sample extraction and ELISA assay should be performed as soon as possible after sample collection. The samples should be extracted according to the relevant literature. If ELISA assay can not be performed immediately, samples can be stored at -20 °C .Repeated freeze-thaw cycles should be avoided.

2. Our kits can not be used for samples with NaN3 which can inhibit the activity of HRP. "The sample cannot be diluted with this kit. Due to the material preparation kit we use, sample matrix interference may falsely reduce the specificity and accuracy of the detection."

### **Procedure**

Dilution of Standards: Dilute the standard by small tubes first, then pipette the volume of 1. 50ul from each tube to microplate well, each tube use two wells, total ten wells.

240.0ng/L	Standard No.1	300µl Orig	ginal Standard	l+150μl Stand	dard diluents
160.0ng/L	Standard No.2	300µl St	andard No.1 -	+ 150µl Standa	ard diluents
80. 0ng/L	Standard No.3	150µl S	tandard No.2	+ 150µl Standa	ard diluent
40.0ng/L	Standard No.4	150µl S	tandard No.3	+ 150µl Standa	ard diluent
20. 0ng/L	Standard No.5 150µl Standard No.4 + 150µl Standard diluent		ard diluent		
Standard Diluent	150µI	150µI	150µl	150µI	150µI
SUNLONG	300µI	300µI	150µI	150µI 3 No	150µI
Dilu	tion Rate 1.5	1.5	2	2	
360.0ng/L	240.0ng/L	160.0ng/L	80.0ng/L	40.0ng/	L 20.0ng/L

Add sample: Set blank wells separately (blank comparison wells don't add sample and 2. HRP-Conjugate reagent, other each step operation is same). testing sample well. add Sample dilution 40µl to testing sample well, then add testing sample 10µl (sample final dilution is 5-fold), add sample to wells, don't touch the well wall as far as possible, and Gently mix.

3. Add enzyme: Add HRP-Conjugate reagent 50µl to each well, except blank well.

- 4. Incubate: After closing plate with Closure plate membrane, incubate for 30 min at 37°C.
- 5. Configurate liquid: 30-fold (or 20-fold) wash solution diluted 30-fold (or 20-fold) with distilled water and reserve.

- 6. Washing: Uncover Closure plate membrane, discard Liquid, dry by swing, add washing buffer (350μl to 400μl, or fill it completely, overflow is acceptable) to each well, still for 30s then drain, repeat 5 times, dry by pat.
- Color: Add Chromogen Solution A 50µl and Chromogen Solution B 50µl to each well, evade the light preservation for 10 min at 37°C
- Stop the reaction: Add Stop Solution 50µl to each well, Stop the reaction(the blue color change to yellow color).
- **9. Assay:** take blank well as zero, Read absorbance at 450nm after Adding Stop Solution and within 15min.

### **Summary:**



### Notes:

- Store the kit at 2-8 °C /-20 ° C upon receipt. The kit should be equilibrated to room temperature before the assay. Remove any unneeded strips from Human orexin antibody-Coated plate, reseal them in zip-lock foil and keep at 2-8°C/-20°C.
- 2. Precipitates may appear in concentrated washing buffer. Please heat the buffer to dissolve all the precipitates, which will not affect the results.
- Accurate pipette should be used to avoid experimental error. Samples should be added to the Microplate in less than 5 minutes. If a large number of samples are included, multiple channel pipette is recommended.
- 4. Standard curve should be included in every assay. Replicate wells are recommended. If the OD value of the sample is greater than the first well of standards, please dilute the sample (n times) before test. When calculating the original orexin concentration, please multiply the total dilution factor (XnX5).
- 5. In order to avoid cross-contamination, Microplate sealers are for one-time use only.

- 6. Please keep Substrate away from light.
- 7. All the operation should be accordance with the manufacturer's instructions strictly. The results determined by the Microtiter Plate Reader.
- 8. All the samples, washing buffer and wastes should be treated as infectious agents.
- 9. Reagents from different lots should not be mixed.

## Precision

Intra-assay Precision (Precision within an assay): 3 samples with low, middle and high level Human orexin were tested 20 times on one plate, respectively.

Inter-assay Precision (Precision between assays): 3 samples with low, middle and high level Human orexin were tested on 3 different plates, 8 replicates in each plate.

CV(%) = SD/meanX100

Intra-Assay: CV<10%

Inter-Assay: CV<12%

## Assay range

6 ng/L - 300 ng/L

# Sensitivity

1.8ng/L


# **Calculation of Results**

Known concentrations of Human orexin Standard and its corresponding reading OD is plotted on the log scale (x-axis) and the log scale (y-axis) respectively. The concentration of Human orexin in sample is determined by plotting the sample's O.D. on the Y-axis. The original concentration is calculated by multiplying the dilution factor.

Equation: Polynomial Quadratic Regression

# **Typical Data**

The standard curve of QS2101Hu is provided for demonstration only. A standard curve should be generated for each set of samples assayed.

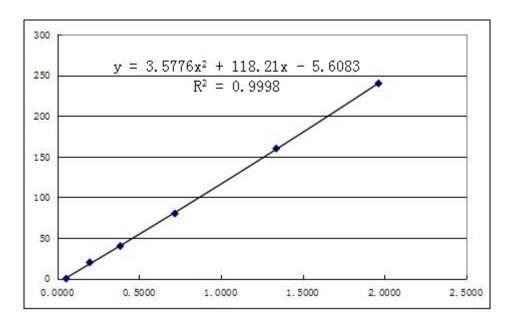

Standard	Concentration	OD Value	Average OD Value	
Blank Well	Ong/L	0.057	0.0550	
		0.053	0.0550	
S1	240ng/L	1.968	1.9635	
		1.959		
S2	100 /1	1.392	1 9905	
	160ng/L	1.285	1. 3385	
S3	80ng/L	0.710	0.7190	
		0.728		
S4	40. /I	0.376	0.0055	
	40ng/L	0.395	0. 3855	
S5	00 /1	0.205	0.1000	
	20ng/L	0. 193	0. 1990	

# Troubleshooting

Weak Signal	Solution
Improper washing	Increasing duration of soaking steps
Incorrect incubation temperature	Incubate at room temperature
antibody are not enough	Increase the concentration of the antibody
Reagent are contaminated	Use new one
Pipette are not clean	Pipette should be clean
No Signal	Solution
Reagent are contaminated	Use new one
Sample prepared incorrectly	Make sure the sample workable/dilution
antibody are not enough	Increase the antibody concentration
Wash buffer contains sodium azide	Use a new wash buffer and avoid sodium azide in it
HRP was not added	Add HRP according to the instruction
Poor Precision	Solution
Imprecise/ inaccurate pipetting	Check/ calibrate pipettes
Incomplete washing of the wells	Make sure wells are washed adequately by filling the wells with wash buffer and all residual antibody solutions crossed well before washing.